



# ATR 42-72 CAPABILITY LIST

## SOURCING / PROCUREMENT / REPAIR

Please address your requests and orders to [sales@spareways.com](mailto:sales@spareways.com)  
<http://www.spareways.net/>

PARTNUMBER	DESCRIPTION	ATA
0-1-08-0151	EJECTION DUCT	71
01N65900	ELT - EMERGENCY LOCATOR TRANSMITTER	23
01N65920	ELT - EMERGENCY LOCATOR TRANSMITTER	23
04-1505-1429	POWER SUPPLY	33
0527-351-925	PLAYER-DIGITAL	23
046-10614-990	PANEL ATTENDANT	25
049-10134-990	MONITOR	25
064-01023-0002	VHF TRANSCEIVER	23
064-01023-0004	VHF TRANSCEIVER	23
064-1023-00	VHF TRANSCEIVER	23
066-01069-00	DME INDICATOR	34
066-01069-0000	DME INDICATOR	34
066-01078-10	NAV RECEIVER	34
066-1066-20	DME TRANSCEIVER	34
066-1066-22	DME TRANSCEIVER	34
066-1071-00	TRANSPONDER	34
066-1077-00	ADF RECEIVER	34
066-1077-01	ADF RECEIVER	34
066-1078-00	NAV RECEIVER	34

066-1078-04	NAV RECEIVER	34
066-3114-01	RADAR INDICATOR	34
06DB06-TYP889	INDICATOR PRESSURE TRIPLE	29
071-1192-09	CONTROL BOX	34
071-1192-14	ATC CONTROL PANEL	34
071-1210-08	ADF CONTROL PANEL	34
071-1215-64	VHF CONTROL PANEL	23
071-1216-20	NAV CONTROL PANEL	34
0861GP	PROBE ALPHA	31
0871BN3-5	DETECTOR ICE	30
097-033-00	SWITCH SELECTOR	80
097-037-00	SWITCH SELECTOR	61
097-038-00	SWITCH SELECTOR	73
1-002-0102-2173	STATIC INVERTER	24
1-002-0102-2326	TRANSFORMER RECTIFIER UNIT	24
100-25110Y00	RESERVOIR BRAKE	32
100-25111Y00	CYLINDER MASTER	32
100-312-00	SWITCH SELECTOR WIPER	30
100-4125Y00	RESERVOIR HYDRAULIC	29
100-5383Y00	VALVE SELECTOR LG	32
100-6090Y00	ACCUMULATOR PARKING	32
100-6094Y00	ACCUMULATOR PARKING	32
100S1000-00	ABSORBER SHOCK	32
101-12062Y00	MODULE PRESSURE	29
1012974-4-002	EEC-ELECTRONIC ENGINE CONTROL UNIT	72
1012974-5-002	EEC-ELECTRONIC ENGINE CONTROL UNIT	72
102-003-11	GENERATOR CONTROL UNIT	24
102EH2EB	PROBE AIR TEMPERATURE	34
103-003-2	SENSOR HALL EFFECT CURRENT	24
103-003-11	SENSOR HALL EFFECT CURRENT	24
1039B25-1	FUEL VALVE	28

1040B25-1	VALVE CROSSFEED	28
1046GT2102AY	HEADSET	23
1046GT2102F	HEADSET	23
1046GT2102G	HEADSET	23
105003-1	BUS POWER CONTROL UNIT	24
105-003-1	BUS POWER CONTROL UNIT	24
105-003-2	BUS POWER CONTROL UNIT	24
105003-2	BUS POWER CONTROL UNIT	24
10-62A	LIGHT CHARTHOLDER	33
106ZC0562004	FAN	21
10839F	FUEL HEATHER	72
1-1-04-0677	SLIDING BALL JOINT	72
11059-72	TIMER	38
111CC01A02	CONTACTOR BATTERY CHARGE	24
112054-01	TRANSMITTER REGULATOR OXYGEN PRESSURE	35
1153-000	PRESSURE SWITCH	28
1153-100	PRESSURE SWITCH	28
1156-100	PRESSURE SWITCH	79
115645-01	MODULE OXYGEN	35
1158-200	PRESSURE SWITCH	30
1158-200-IND-02	PRESSURE SWITCH	30
1158-200-IND-03	PRESSURE SWITCH	30
1173T0319	SENSOR OVERHEAT	29
119063-01	STOWAGE COMPARTMENT	35
11S53975000-018	DOME RADAR	53
11S76180650-002	MICROSWITCH BOX ASSY	27
11S76180650-004	MICROSWITCH BOX ASSY	27
11S76180650-006	MICROSWITCH BOX ASSY	27
11S76180650-008	MICROSWITCH BOX ASSY	27
11S76180650-010	MICROSWITCH BOX ASSY	27
11S76180650-014	MICROSWITCH BOX ASSY	27
121CC01	CONTACTOR BATTERY CHARGE	24

121CC01A02	CONTACTOR BATTERY CHARGE	24
12062GR82	VALVE	29
1206P0121	SWITCH PRESSURE	29
12147AGKX759	SWITCH	23
1250822-01	SEAT-OBSERVER	25
1274-1	MOTOR ELECTRIC	28
129580-6	LIMITER TEMPERATURE	21
1304-000	SWITCH PRESSURE	30
1327-82	ANTENNA ELT	31
136A6-2	VALVE-DR	34
1370-100	SWITCH PRESSURE	61
140-071	SENSOR WHEEL SPEED	32
1421-100	SWITCH PRESSURE FUEL FEED LOW	28
14300-122	MOTOR	38
14302-211	TIMER ASSEMBLY	38
14352-001	PUMP	38
14352-009	PUMP	38
156	TRANSFORMER	30
1600D000	TURBINE COOLING	21
1600D000-002	TURBINE COOLING	21
1600D000-003	TURBINE COOLING	21
1658-6	EMERGENCY BATTERY	24
1708337-B4	EXTINGUISHER	26
174097-85	MASK ASSY OXYGEN	35
176574-115	CYLINDER O2	35
176574-77	CYLINDER O2	35
17A717-03-00	ACCELEROMETER TRHEE AXES	34
194780-1	EXTRACTOR WATER	38
19-51-41	ENGINE FIRE HANDLE	26
19-51-51	ENGINE FIRE HANDLE	26
18012	EXTINGUISHER PORTABLE	26

10845B	OIL COOLER	79
20032-2	ALTERNATOR AC	24
20-035008-043	AIR LEAK DETECTOR CONTROLLER	26
201-108-000-011	APIU - PROPELLER INTERFACE UNIT	61
201-152-000-011	CONTROL UNIT ARMOURED COCKPIT DOOR	25
201-156-000-021	APIU - PROPELLER INTERFACE UNIT	61
201-25109Y00	VALVE BRAKE PARKING	32
201-25112Y00	VALVE BRAKE PARKING	32
20732	TRANSFORMER CURRENT	24
2095E010800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095E020800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F010800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F020800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F030800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F030800AMDTA	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F030800AMDTB	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F030800AMDTC	VALVE ELECTROPNEUMATIC OUTFLOW	21
2095F040800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096G010800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096G020800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H010800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H020800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H030800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H030800AMDTA	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H030800AMDTB	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H030800AMDTC	VALVE ELECTROPNEUMATIC OUTFLOW	21
2096H040800	VALVE ELECTROPNEUMATIC OUTFLOW	21
2100-1020-02	COCKPIT VOICE RECORDER	23
2100-1225-22	SSCVR - SOLID STATE COCKPIT VOICE RECORDER	23
2100-2043-12	FLIGHT DATA RECORDER FA2100	31
2100-2044-01	FLIGHT DATA RECORDER FA2100	31
2100-2044-12	FLIGHT DATA RECORDER FA2100	31

2100-4043-00	SOLID STATE FLIGHT DATA RECORDER	31
2100-4045-00	DIGITAL FLT DATA RECORDER	31
2100-4245-00	DFDR - DIGITAL FLIGHT DATA RECORDER	31
2136-315-80-11	INDICATOR AMMETER	24
2136-430-80-11	INDICATOR DE ICING MONITORING	24
2-1549-2	BRAKE ASSY	32
2-1549-3	BRAKE ASSY	32
2179YD	VALVE FILLER	29
2204400-2	TURBINE COOLING	21
2204400-4	TURBINE COOLING	21
2204400-5	TURBINE COOLING	21
2205120-1	TURBINE COOLING	21
2205120-1SR1	TURBINE COOLING	21
2205120-3	TURBINE COOLING	21
2205120-3SR1	TURBINE COOLING	21
2205120-4	TURBINE COOLING	21
2205120-4SR1	TURBINE COOLING	21
2214805-2	VALVE TIC	21
2214805-3	VALVE TIC	21
2214805-4	VALVE TIC	21
2214805-5	VALVE TIC	21
22250F060200	DIGITAL CONTROLLER	21
22250F070200	DIGITAL CONTROLLER	21
22250F100200	DIGITAL CONTROLLER	21
22250F110200	DIGITAL CONTROLLER	21
2250-025-01	GAUGE PRESSURE HYDROLIC	29
223-00157-000	LINEAR ACCELEROMETER THREE AXIS	31
2340356-3	EXCHANGER HEAT DUAL	21
2340356-3SR1	EXCHANGER HEAT DUAL	21
2340358-1	CONDENSER	21
242082-4	VALVE FUEL MOTIVE FLOW	28

2432-11	REGULATOR	24
2432-30	GCU - GENERATOR CONTROL UNIT AC	24
2583AB03	CONTROL	23
2593379-2	COMPENSATOR REMOTE MAGNETIC	34
261065723-3000	MPC - MULTIPURPOSE COMPUTER ED36	34
261310206-0103	SENSOR UNIT MAGNETIC	34
261500123-0501	AHRU - ATTITUDE & HEADING REFERENCE UNIT	34
26355-1	FLOW DIVIDER & DUMP VALVE	72
26659-5312	ACTUATOR OIL COOLER FLAP	79
26659-5313	VALVE TEMPERATURE PRESSURE	79
26V10TT4B01	TRANSMITTER POSITION SYNCHRO	27
2757B01	VALVE	36
2794-901-00-11	POWER GENERATION DISPLAY PANEL	24
291F01500-001	INDICATOR LEVEL SWITCH	29
291F02000-003	ACCUMULATOR LINE	29
291-10	LIGHT REAR NAVIGATION	33
291-21	LIGHT-NAVIGATION RH	33
291-31	LIGHT NAVIGATION LH	33
292-12	STROBE LIGHT	33
292-13	STROBE LIGHT	33
292-22	POWER SUPPLY	33
292-23	POWER SUPPLY	33
292-24	POWER SUPPLY	33
292-25	POWER SUPPLY	33
2936	ACTUATOR FUEL CROSSFEED	28
2940	ACTUATOR FUEL CROSSFEED	28
2995-100-00-11	SHUNT-BATTERY CH/DISCH	24
2M100-3S	DRAIN	34
30048-0000-18	AUTOFEATHER UNIT	72
30048-0000-28	AUTOFEATHER UNIT	72
30100022-4	LAVATORY EXTINGUISHER	26

301-1004A	EMERGENCY POWER SUPPLY	33
301-1151	BATTERY STORAGE	33
301-1180	EMERGENCY POWER SUPPLY	33
301-1180A	EMERGENCY POWER SUPPLY	33
301-1185	EMERGENCY POWER SUPPLY	33
301-1185A	EMERGENCY POWER SUPPLY	33
301-1206	FLOOD LIGHT	33
301-1206A	FLOOD LIGHT	33
301-1210	PAX DOOR EMER LIGHT	33
301-2000	POWER SUPPLY	33
301-2001	BATTERY EQUIPPED	33
301-2300	BOX ASSY EMERGENCY LIGHT	33
301-2400	BOX ASSY EMERGENCY LIGHT	33
301-2600	FLIGHT ATTENDANT PANEL	31
301-2630	FLIGHT ATTENDANT PANEL	31
301-2640	FLIGHT ATTENDANT PANEL	31
301-2642	FLIGHT ATTENDANT PANEL	31
301-2700	FLOOD LIGHT	33
301-2701	FLOOD LIGHT	33
301-2714	FLIGHT ATTENDANT PANEL	31
301-2715	FLIGHT ATTENDANT PANEL	31
301-2800	PASSENGER SERVICE UNIT	33
301-3000	POWER SUPPLY	33
301-3017	BATTERY EQUIPPED	33
301-3017A	BATTERY EQUIPPED	33
301-3017B	BATTERY EQUIPPED	33
301-3100	EMERGENCY POWER SUPPLY	33
301-3250-00	FLIGHT ATTENDANT PANEL	31
30180B25-1683	LIGHT MAIN WHEEL	33
3033509	PROBE PULSE	72
3033914	PT DISK STAGE 2	72
3037785	BRAKE PROPELLER	61



3038240	BRAKE PROPELLER	61
3038513	PT DISK STAGE 1	72
3038699	FUEL MANIFOLD ADAPTER	72
3038827	FUEL MANIFOLD ADAPTER	72
3039172	INTERSTAGE AIR SEAL	72
3039242	PROBE PULSE	72
3039380	GEERBOX PW127	72
3039412	LPT DISK	72
3039487	LP IMPELLER	72
3039639	HPT REAR COVER	72
3039640	HPT FRONT COVER	72
3039609	EXCITER IGNITION	72
3039639	COVER HP REAR	72
3041511	HPT DISK TURBINE	72
3043293	HP IMPELLER	72
3045672	FUEL MANIFOLD ADAPTER	72
3045731	HP NOZZLE SEGMENT	72
3045731CL0230	HP NOZZLE SEGMENT	72
3045731CL0265	HP NOZZLE SEGMENT	72
3045731 CL0290	HP NOZZLE SEGMENT	72
3045781-01	FUEL MANIFOLD ADAPTER	72
3045788-01	FUEL MANIFOLD ADAPTER	72
3047500	TURBOMACHINERY MODULE	72
3047600	ENGINE PW127E	72
3053728-01	WIRING HARNESS	72
3055635-01	PUMP EJECTOR	72
3072764-01	IMPELLER LP	72
3072766-01	IMPELLER LP	72
3073471-01	SENSOR TORQUE METER	72
3073471-02	SENSOR TORQUE METER	72
3075879-01	DATA COLLECTION UNIT	72
3075961-04	HBOV - VALVE ASSY INTERCOMPRESS BLEED	72

3076200-03	HBOV - VALVE ASSY INTERCOMPRESS BLEED	72
3076200-08	HBOV - VALVE ASSY INTERCOMPRESS BLEED	72
3078166-01	AFCU - AUTO FEATHER CONTROL UNIT	72
309-4326	SWITCH CONTROL PITCH TRIM	27
3115601-01	HPT BLADE	72
3116050-078	WIRING HARNESS ASSY	72
3116499-02	PROBE TORQUE	72
3117178-04	MFCU - MECHANICAL FUEL CONTROL UNIT	72
3117178-08	MFCU - MECHANICAL FUEL CONTROL UNIT	72
3117178-10	MFCU - MECHANICAL FUEL CONTROL UNIT	72
3118091-01	AFCU - AUTO FEATHER CONTROL UNIT	72
3118263-01	FUEL COOLED OIL COOLER	72
3118511-01	FLOW DIVIDER & DUMP VALVE	72
3118642-01	SERVO VALVE	72
3119957-03	HBOV - VALVE ASSY INTERCOMPRESS BLEED	72
3120075-02	FUEL HEATHER	72
3120249-01	PUMP ENGINE FUEL	72
3120249-02	PUMP ENGINE FUEL	72
3120890-01	BRAKE PROPELLER	61
3120891-01	BRAKE PROPELLER	61
3129675-01	AFCU AUTO FEATHER CONTROL UNIT	72
3-1518-1	WHEEL MLG	32
3-1518-2	WHEEL MLG	32
3-1528	WHEEL NLG	32
31P172-27-1	DE ICER AIR INTAKE LIP	30
31P172-32-1	DE ICER AIR INTAKE THROAT UPPER	30
31P172-33-1	DE ICER COOLER UPPER DUCT	30
31P172-35-1	DE ICER AIR INTAKE THROAT LOWER	30
3202258-2	VALVE CHECK AIR BLEED	21
3202260-1	VALVE CHECK ECS DISTRIBUTION	21
320482-1	SHUT OFF VALVE	21

320482-2	SHUT OFF VALVE	21
3214102-4	REGULATOR PRESSURE	21
321-423-400-0	END PIECE ASSY PRESSURE	78
3214558-1	REGULATING VALVE	21
3214558-2	REGULATING VALVE	21
3214560-1	REGULATING VALVE	36
3214560-2	REGULATING VALVE	36
3214958-1	PRESSURE REGULATING & SHUTOFF VALVE	36
3214958-2	PRESSURE REGULATING & SHUTOFF VALVE	36
3214960-1	PRESSURE REGULATING AND SHUTOFF VALVE	21
3214960-2	PRESSURE REGULATING AND SHUTOFF VALVE	21
3214960-3	PRESSURE REGULATING AND SHUTOFF VALVE	21
32-158-4-1	DE ICER HORIZONTAL STABILIZER LH	30
32-158-4-2	DE ICER HORIZONTAL STABILIZER RH	30
32-172-38-1A	DE ICER OUTER WING LH	30
32-172-38-2A	DE ICER OUTER WING RH	30
32-172-38-2B	BOOT DE ICER	30
32-172-39-1A	DE ICER OUTER WING LH	30
32-172-39-2A	DE ICER OUTER WING RH	30
324F02000-05	ACCUMULATOR LINE	29
3244871-6	MFCU - MECHANICAL FUEL CONTROL UNIT	72
3244871-8	MFCU - MECHANICAL FUEL CONTROL UNIT	72
327000-202M00	ROD DYNAMOMETRIC ROLL	27
327000-203M00	ROD DYNAMOMETRIC ROLL	27
327000-204M00	ROD DYNAMOMETRIC ROLL	27
3289674-1	BLEED AIR SHUTOFF VALVE	21
3289704-1	VALVE ASSY SHUTOFF	36
3289706-1	ECU ISOLATION VALVE	36
3290104-1	VALVE HOT BYPASS	21
3290196-1	ECU ISOLATION VALVE	36
3290196-2	ECU ISOLATION VALVE	36

3290288-1	TEMPERATURE CONTROL VALVE	21
32P158-12-A	BOOT DE ICER	30
32P158-22-2	BOOT DE ICER	30
32P172-42-1	DE ICER CENTER WING LH	30
32P172-42-2	DE ICER CENTER WING RH	30
32P172-5-1	DE ICER INNER WING RH	30
32P172-5-2	DE ICER INNER WING LH	30
351-33672-101	PANEL CREW ALERTING	31
351-35848-102	PANEL CREW ALERTING	31
35301-139	WIRING SYSTEM AIR LEAK DETECTION	36
35518-3-310	ELEMENT SENSING AIR LEAK DETECTION	36
35530-2-310	ELEMENT SENSING AIR LEAK DETECTION	36
35540-2-310	ELEMENT SENSING AIR LEAK DETECTION	36
35544-3-310	ELEMENT SENSING AIR LEAK DETECTION	36
35567-2-310	ELEMENT SENSING AIR LEAK DETECTION	36
35592-3-310	ELEMENT SENSING AIR LEAK DETECTION	36
35622-4-310	ELEMENT SENSING AIR LEAK DETECTION	36
360-00449-100	FLIGHT DATA ENTRY PANEL	31
36500A63-11	CAP OVERWING REFUELLING	28
37-16	BALLAST	33
37-17	BALLAST	33
37-17-2	BALLAST	33
3718519-2	OSCILLATOR	34
374FL01	SWITCH PROXIMITY	27
39-739-1	MODULE ANTISKID	32
3A063-0079-02-3	SEAT CAPTAIN	25
3A063-0079-03-4	SEAT CAPTAIN	25
3A063-0080-02-3	SEAT FIRST OFFICER	25
3A063-0080-03-4	SEAT FIRST OFFICER	25
4013013-913	VERTICAL SPEED INDICATOR	34
4016341-906	ALTIMETER	34

4019501	HYD PUMP	29
40195-01	HYD PUMP	29
40678-2	MAIN BATTERY	24
407A0103	JET PUMP	21
41115A01	VALVE CHECK,	21
41125A01	VALVE CHECK	21
41152C020000	VALVE CHECK	21
41173A02	VALVE CHECK	21
41173B01	RAM AIR VALVE	21
41173C010000	RAM AIR VALVE	21
4122-006009	PUMP PROPELLER FEATHERING	61
4125-32	FILTER-ELEMENT RETURN	29
4128-2	CENTERING UNIT	27
4170003620	COMPENSATOR BRAKE TEMPERATURE	32
4170003630	COMPENSATOR BRAKE TEMPERATURE	32
4170006310	ACTUATOR CARGO DOOR	52
420-00332-501	AHRU - ATTITUDE & HEADING REFERENCE UNIT	34
420300M00	CABLE TENSION REGULATOR	27
4204301	PUMP HYDRAULIC ELECTRIC	29
4205301	PUMP HYDRAULIC ELECTRIC	29
4213699	LIGHT WING ENGINE	33
4213705	LIGHT WING ENGINE RH	33
4213966	LIGHT LOGO	33
4213973	LIGHT TAXI	33
4213989	LIGHT LANDING	33
4216009	MOTOR CONVERTER RH	30
4216016	MOTOR CONVERTER LH	30
4262461	CARGO DOOR ACTUATOR	52
4267812	LIGHT WING ENGINE	33
4267828	LIGHT WING ENGINE	33
42-801-1	CONTROL UNIT ANTISKID SYSTEM	32
4285098	LIGHT WING ENGINE	33

4285104	LIGHT WING ENGINE	33
4292915	LIGHT LANDING	33
4295747	LIGHT TAXI	33
4297515	PUSH PULL CABLE	76
4297522	PUSH PULL CABLE	61
4305790340	TRANSDUCER TEMPERATURE	32
4319586	LIGHT LANDING	33
4370645	ARM WIPER RH	30
4370652	ARM WIPER LH	30
442920-1	MANIFOLD DISTRIBUTOR	35
444-00522-500	INDICATOR HP	35
446077	DRAIN WATER	26
446078	VALVE TWO WAY & WATER DRAIN	26
45150560	SENSOR ANGLE OF ATTACK	31
45150561	SENSOR ANGLE OF ATTACK	31
45150563	SENSOR ANGLE OF ATTACK	31
457400TC0812	INDICATOR VSI - TCAS	34
4679-750-80-11	INDICATOR FLAP POSITION	27
4679-751-80-11	INDICATOR FLAP POSITION	27
4679-752-80-10	INDICATOR FLAP POSITION	27
4679-753-80-10	INDICATOR FLAP POSITION	27
4679-754-80-10	INDICATOR FLAP POSITION	27
4679-764-80-10	INDICATOR FLAP POSITION	27
472420-2	FIRE EXTINGUISHING BOTTLE	26
472467-3	EXTINGUISHER ENGINE	26
48-077	VALVE RELIEF LOW PRESSURE	32
48114-1030	COOLER OIL	79
4863-501-80-11	INDICATOR TRIM POSITION	27
4863-502-80-10	INDICATOR TRIM POSITION	27
4863-503-80-10	INDICATOR TRIM POSITION	27
4863-504-80-11	INDICATOR TRIM POSITION	27

49310-31	INDICATOR CABIN PRESSURE	21
49310-50	INDICATOR CABIN PRESSURE	21
49380	PROBE PITOT	21
49540-02	PROBE STATIC	21
5006856	WHEEL MLG	32
5006856-1	WHEEL MLG	32
5006856-2	WHEEL MLG	32
5006856-3	WHEEL MLG	32
5006856-4	WHEEL MLG	32
5006856-5	WHEEL MLG	32
5006857-1	BRAKE ASSY	32
5006857-2	BRAKE ASSY	32
5006858-1	WHEEL NLG	32
5006858-2	WHEEL NLG	32
5009982D	FUEL PUMP ENGINE	72
5012609	BRAKE ASSY	32
5126-220-80-11	INDICATOR FUEL TEMPERATURE	73
5126-223-80-11	INDICATOR FUEL TEMPERATURE	73
51653-152	DETECTOR UNIT	26
520-3337-213	RADIO MAGNETIC INDICATOR	34
52SP172-41-1	DE ICER WING LH	30
52SP172-41-2	DE ICER WING RH	30
530AL01CN	DISCONNECTING UNIT	31
5427-404-80-10	INDICATOR TEMPERATURE	21
5496-02	NET	25
54962	NET	25
559-012A	STATIC INVERTER	24
559-012B	STATIC INVERTER	24
559-012C	STATIC INVERTER	24
559-012D	STATIC INVERTER	24
5618C000-002	VALVE TIC	21
5618C000-003	VALVE TIC	21

5677-406-80-13	INDICATOR TEMPERATURE PRESSURE OIL	79
5677-406-80-14	INDICATOR TEMPERATURE PRESSURE OIL	79
5677-407-80-14	INDICATOR TEMPERATURE PRESSURE OIL	79
5677-409-80-10	INDICATOR TEMPERATURE PRESSURE OIL	79
5677-420-80-10	INDICATOR TEMPERATURE PRESSURE OIL	79
5677-421-80-10	INDICATOR TEMPERATURE PRESSURE OIL	79
5677-705-80-10	INDICATOR SPEED HP	77
5677-750-80-12	INDICATOR TORQUE	73
5677-755-80-11	INDICATOR TORQUE	73
5677-756-80-10	INDICATOR TORQUE	73
5677-765-80-10	INDICATOR TORQUE	73
5677-766-80-10	INDICATOR TORQUE	73
5678-553-80-12	INDICATOR ITT	77
5678-555-80-10	INDICATOR ITT	77
5678-559-80-10	INDICATOR ITT	77
5678-704-80-11	INDICATOR NH	77
5678-710-80-12	INDICATOR PROPELLER NP	61
5678-711-80-10	INDICATOR PROPELLER NP	61
5678-713-80-10	INDICATOR PROPELLER NP	61
5678-715-80-10	INDICATOR PROPELLER NP	61
5678-716-80-10	INDICATOR PROPELLER SPEED	61
622-1270-001	TRANSPONDER ATC	34
622-2362-001	RECEIVER ADF	34
622-2363-001	RECEIVER ADF	34
622-6137-001	NAV RECEIVER	34
622-6137-201	NAV RECEIVER	34
622-6152-001	VHF COMM TRANSCEIVER	23
622-6152-011	VHF COMM TRANSCEIVER	23
622-6152-031	VHF COMM TRANSCEIVER	23
622-6153-001	VHF COMM TRANSCEIVER	23
622-6263-001	DME INTERROGATOR	34
622-6263-003	DME INTERROGATOR	34



622-6520-003	VHF CONTROL UNIT	23
622-6520-007	VHF CONTROL UNIT	23
622-6520-008	VHF CONTROL UNIT	23
622-6520-009	VHF CONTROL UNIT	23
622-6521-011	VOR DME CONTROL UNIT	34
622-6522-002	ADF CONTROL UNIT	34
622-6522-003	ADF CONTROL UNIT	34
622-6522-004	ADF CONTROL UNIT	34
622-6523-003	CONTROL UNIT ATC	34
622-6523-005	CONTROL UNIT ATC	34
622-6523-007	CONTROL UNIT DUAL ATC	34
622-6523-008	CONTROL UNIT ATC	34
622-6523-205	CONTROL UNIT ATC	34
622-6523-207	CONTROL UNIT ATC	34
622-6524-003	INDICATOR DME	34
622-6590-001	ADAPTER BOX	34
622-6590-002	ADAPTER BOX	34
622-8111-006	CONTROL PANEL HF-COM	34
622-8114-002	COUPLER HF ANTENNA	34
622-8971-012	ANTENNA TCAS TTR-920	34
622-8971-014	ANTENNA TCAS TTR-920	34
622-8971-112	ANTENNA TCAS TTR-920	34
622-8971-120	ANTENNA TCAS TTR-920	34
622-8971-122	ANTENNA TCAS TTR-920	34
622-8971-320	ANTENNA TCAS TTR-920	34
622-8971-420	ANTENNA TCAS TTR-920	34
622-8971-422	ANTENNA TCAS TTR-920	34
622-8971-620	ANTENNA TCAS TTR-920	34
622-8971-622	ANTENNA TCAS TTR-920	34
622-8973-001	ANTENNA TCAS TTR-920	34
622-9210-108	TRANSPONDER-ATC	34
624992-3	CONTROLLER	56

641134-3	SWITCH OVERTEMPERATURE	36
641134-4	SWITCH OVERTEMPERATURE	36
642012-1	SWITCH OVERTEMPERATURE	36
624820-1	TEMPERATURE CONTROLLER	21
624992-2	WINDOW HEAT CONTROL UNIT	30
624992-3	WINDOW HEAT CONTROL UNIT	30
625718-1	TEMPERATURE SELECTOR	21
63600-101	LIFE VEST	25
64050-660-1	AIRSPEED INDICATOR	34
64050-661-1	AIRSPEED INDICATOR	34
64050-662-1	AIRSPEED INDICATOR	34
64050-663-1	AIRSPEED INDICATOR	34
641134-3	SWITCH	21
641134-4	SWITCH	21
64131-560-1	ALTIMETER	34
64141-362-1	ALTIMETER	34
64141-372-1	ALTIMETER	34
642017-2	SWITCH PRESSURE	21
653-9015-001	MOUNT ADAPTER ADF-ATC	34
671F01000-001	SOLENOID GROUND IDLE	73
6799A010001	VALVE ANTI ICING	30
7000700-942	AIR DATA COMPUTER	34
7000700-951	AIR DATA COMPUTER	34
7000700-959	AIR DATA COMPUTER	34
7000700-961	AIR DATA COMPUTER	34
7002260-722	ACTUATOR SERVO	22
7002638-907	INDICATOR TAS TEMP	34
7002860-909	INDICATOR AIRSPEED	34
7003110-912	ELECTRONIC DISPLAY ED-800	34
7003110-921	ELECTRONIC DISPLAY ED-800	34
7003110-932	ELECTRONIC DISPLAY ED-800	34

7003131-902	VIDEO DRIVER CCA	34
7003360-931	AHRU	34
7003360-932	AHRU	34
7003360-933	AHRU	34
7003360-934	AHRU	34
7003360-935	AHRU	34
7003360-936	AHRU	34
7003360-944	AHRU	34
7003360-946	AHRU	34
7003360-947	AHRU	34
7003360-948	AHRU	34
7003652-602	DISPLAY ADVISORY UNIT	22
7003652-902	ADVISORY DISPLAY UNIT	22
7003974-603	FLIGHT GUIDANCE COMPUTER	22
7003974-604	FLIGHT GUIDANCE COMPUTER	22
7003974-605	COMPUTER AFCS	22
7003974-606	FLIGHT GUIDANCE COMPUTER	22
7003974-607	FLIGHT GUIDANCE COMPUTER	22
7003974-608	FLIGHT GUIDANCE COMPUTER	22
7003974-609	FLIGHT GUIDANCE COMPUTER	22
7003975-602	FLIGHT GUIDANCE CONTROLLER	22
7004544-412	SYMBOL GENERATOR UNIT	34
7004544-712	SYMBOL GENERATOR UNIT	34
7004544-713	SYMBOL GENERATOR	34
7004544-714	SYMBOL GENERATOR	34
7004544-715	SYMBOL GENERATOR UNIT	34
7005400-902	CLINOMETER	34
7005819-202	DISPLAY CONTROLLER	34
7005819-506	CONTROL PANEL EFIS	34
7005973-912	HEADING COURSE CONTROLLER	34
7005973-914	HEADING COURSE CONTROLLER	34
7006921-302	WEATHER RADAR CONTROLLER	34

7008471-668	WEATHER RADAR CONTROLLER	34
7008932-901	CIRCUIT CARD ASSY	34
7010133	VALVE FLUX	34
7021450-421	WEATHER RADAR	34
7021450-601	WEATHER RADAR	34
7021451-418	ANTENNA WEATHER RADAR PLATE	34
7021479-3	FLAT ANTENNA	34
7031-3	FEEDBACK UNIT FLAP POSIT	27
7032-2	SWITCH UNIT FLAP CONTROL	27
7048	SWITCH UNIT FLAP CONTROL	27
7048-1	SWITCH UNIT FLAP CONTROL	27
7010133	VALVE FLUX	34
720500M01	ACTUATOR-ELEVATOR	27
722-139-1	SENSOR HIGH LEVEL	28
722-404-1	SENSOR HIGH LEVEL	28
722-404-2	SENSOR HIGH LEVEL	28
727-0858-01	CENTRAL CONTROL BOX	33
727-0866-30	LIGHT REAR NAVIGATION	33
727-1060-03	ICP - INDEX CONTROL PANEL 2VM	33
727-1061-01	ICP - INDEX CONTROL PANEL 6VM	33
727-1062-01	ICP - INDEX CONTROL PANEL 110VM	33
727-1063-01	ICP - INDEX CONTROL PANEL 111VM	33
727-1064-01	ICP - INDEX CONTROL PANEL 112VM	33
727-1065-01	ICP - INDEX CONTROL PANEL 114VM	33
727-1066-01	ICP - INDEX CONTROL PANEL 131VM	33
727-1067-01	ICP - INDEX CONTROL PANEL 132VM	33
727-1068-03	ICP - INDEX CONTROL PANEL 133VM	33
727-1069-03	ICP - INDEX CONTROL PANEL 134VM	33
727-1070-01	ICP - INDEX CONTROL PANEL 400VM	33
727-1071-03	ICP - INDEX CONTROL PANEL 401VM	33
727-1072-01	ICP - INDEX CONTROL PANEL 402VM	33
727-1073-02	ICP - INDEX CONTROL PANEL 404VM	33

727-1074-01	ICP - INDEX CONTROL PANEL 811VM	33
727-1076-01	LIGHT MANAGEMENT UNIT	33
7306G01	VALVE-CHECK	21
738821-1-2	FUEL CONTROL UNIT	28
740121-110-0200	SEAT	25
740121-110-0244	SEAT	25
740121-110-0700	SEAT	25
7404SB01	VALVE NON RETURN	61
741702-08	DOUBLE SEATS	25
741712-07	DOUBLE SEATS	25
742447-1-2	REFUEL CONTROL PANEL	28
748-465-5	INDICATOR FUEL QUANTITY	28
748-522-2	INDICATOR FUEL QUANTITY	28
748-681-2	INDICATOR FUEL QTY REPEATER	28
748-681-3	INDICATOR FUEL QTY REPEATER	28
748-682-1	INDICATOR FUEL QTY REPEATER	28
748-682-2	INDICATOR FUEL QTY REPEATER	28
748-682-3	INDICATOR FUEL QTY REPEATER	28
748-722	INDICATOR FUEL QTY REPEATER	28
748-724	INDICATOR FUEL QTY REPEATER	28
748-724	INDICATOR FUEL QTY REPEATER	28
749-158	INDICATOR FUEL QUANTITY	28
749-160	INDICATOR FUEL QUANTITY	28
749-160-1	INDICATOR FUEL QTY REPEATER	28
749-161	INDICATOR FUEL QUANTITY	28
749161-1	INDICATOR FUEL QTY REPEATER	28
749-188	INDICATOR PRESSURE TRIPLE	29
749-757	INDICATOR FUEL QUANTITY	28
749-758	INDICATOR FUEL QUANTITY	28
749-759	INDICATOR FUEL QUANTITY	28
749-759-1	INDICATOR FUEL QUANTITY	28
749-760	INDICATOR FUEL QUANTITY	28

749-760-1	INDICATOR FUEL QUANTITY	28
750T2112-9	HANDSET	23
7510700-960	TRANSPONDER ATC MODE S	34
7510700-961	TRANSPONDER ATC MODE S	34
7510707-968	KIT MOUNTING - TRANSPONDER ATC	34
7514081-903	DIRECTIONAL ANTENNA TCAS	34
754AE4-621W	LIGHT MASTER WARNING	31
754AE4-821C	LIGHT MASTER CAUTION	31
766-046-2	INDICATOR FUEL QUANTITY	28
766-047-2	INDICATOR FUEL QUANTITY	28
766-048-2	INDICATOR FUEL QUANTITY	28
766-793-1	INDICATOR FUEL QUANTITY	28
766-795-2	INDICATOR FUEL QUANTITY	28
766-796-2	INDICATOR FUEL QUANTITY	28
766-797-2	INDICATOR FUEL QUANTITY	28
766-983-1	INDICATOR FUEL QUANTITY	28
768-055	INDICATOR FUEL QUANTITY	28
768-100	INDICATOR FUEL QUANTITY	28
778743-2	GENERATOR PULSE PROPELLER	61
782515-1	TRANSFER TUBE	61
782701-5	HUB PROPELLER	61
784914-1	BULKHEAD	61
784914-2	BULKHEAD	61
784914-3	BULKHEAD	61
784914-4	BULKHEAD	61
785-259-1	SWITCH OVER TEMPERATURE	21
785-590-1	CONTROLLER WINDSHIELD TEMPERATURE	30
792000	PROPELLER ASSY	61
790176-1	SPINNER	61
790180-1	ACTUATOR	61
790180-2	ACTUATOR	61

790180-3	ACTUATOR	61
796-806	PRESELECTOR	28
796-814	PRESELECTOR	28
796-947-3	HARNESS FUEL QUANTITY PROBE	28
796-948-3	HARNESS FUEL QUANTITY PROBE	28
796-949-3	HARNESS FUEL QUANTITY PROBE	28
796-950-1	JUNCTION BOX	28
796-966	PRESELECTOR FUEL QUANTITY	28
796-967	PRESELECTOR FUEL QUANTITY	28
796-977-2	HARNESS FUEL QUANTITY PROBE	28
796-979	PRESELECTOR FUEL QUANTITY	28
796-984	PRESELECTOR FUEL QUANTITY	28
798-017-3	HARNESS FUEL QUANTITY PROBE	28
798-038	PROBE FUEL QUANTITY	28
798-078-2	HARNESS FUEL QUANTITY PROBE	28
8001006Y00	LIGHT TAXI AND TAKE OFF	33
8001006Y01	LIGHT TAXI AND TAKE OFF	33
8-010-010	CLINOMETER ROLL ATTITUDE	28
802308-1	HUB PROPELLER	61
802396	HUB PROPELLER	61
810433-1	BULKHEAD	61
810433-2	BULKHEAD	61
810447-1	HUB PROPELLER	61
810449-1	HUB PROPELLER	61
810461-1	TRANSFER TUBE	61
810591-1	HUB PROPELLER	61
810592-1	SPINNER	61
810610-1	PROPELLER ASSY	61
810610-2	PROPELLER ASSY	61
8107-110-00-10	TRANSMITTER OIL PRESSURE	79
811107-1	SPINNER	61

814620-1	GOVERNOR PROPELLER OVERSPEED	61
814620-2	GOVERNOR PROPELLER OVERSPEED	61
814730-1	GOVERNOR PROPELLER OVERSPEED	61
814829-1	TRANSFER TUBE	61
814844-1	HUB PROPELLER	61
814844-1	HUB PROPELLER	61
815470-1	HUB PROPELLER	61
815470-2	HUB PROPELLER	61
815500-2	PROPELLER ASSY	61
815500-3	PROPELLER ASSY	61
815550-1	PROPELLER ASSY	61
815550-2	PROPELLER ASSY	61
815585-2	ACTUATOR	61
815585-3	ACTUATOR	61
815585-4	ACTUATOR	61
815585-5	ACTUATOR	61
815585-6	ACTUATOR	61
815585-7	ACTUATOR	61
815587-1	TRANSFER TUBE	61
815590-1	PROPELLER ASSY	61
816332-5-401	PEC - CONTROL ELECTRONIC PROPELLER	61
817579-1	SLIPRING	61
817579-2	SLIPRING	61
820154-1-002	ELEC ENGINE CONTROL	72
820539-1	BRUSH BLOCK ASSY	61
82165-22	MCDU	34
822-0101-002	TRANSCEIVER HF	23
822-1113-001	TRANSCEIVER VHF-COM	23
822-1113-021	TRANSCEIVER VHF	23
822-1120-003	VHF PANEL	23
822-1293-002	TRANSCEIVER TCAS	34



822-1465-001	RECEIVER VOR-ILS-MKR	34
822-1466-001	RECEIVER DME	34
822-1468-001	TRANSCEIVER VHF	23
822-1468-110	TRANSCEIVER VHF	23
822-1807-004	CONTROL UNIT DUAL ATC	34
822-2175-001	CONTROL UNIT CTL-22D	23
822-2175-003	CONTROL UNIT CTL-22D	23
822-2175-005	CONTROL UNIT CTL-22D	23
822-2175-007	CONTROL UNIT CTL-22D	23
822-2175-009	CONTROL UNIT CTL-22D	23
822-2176-001	CONTROL UNIT CTL-22D	23
822-2176-003	CONTROL UNIT VHF	23
822-2176-005	CONTROL UNIT VHF	23
822-2176-007	CONTROL UNIT VHF	23
822-2176-009	CONTROL UNIT VHF	23
822-2179-011	CONTROL UNIT VOR-ILS-DME	23
822-2180-003	CONTROL UNIT ADF	23
822-2182-103	CONTROL UNIT TCAS	23
8236-3	ACTUATOR TRIM	27
82425-00-0060	PROCESSOR UNIT-NAVIGATION	34
8260-121	GENERATOR STARTER DC	24
8260-123	GENERATOR STARTER DC	24
8260-124	GENERATOR STARTER DC	24
8295-1	ACTUATOR ELECTRIC	79
8300-1	ACTUATOR STICK PUSHER	27
8312-120-00-10	SENSOR DUCT TEMPERATURE INDICATING	21
8316-103-00-10	TRANSMITTER FUEL TEMPERATURE	79
8400-040-00-10	TRANSFORMER CURRENT	30
840-30111	FILTER HYDRAULIC ACOUSTIC	25
8535C00	CONDENSER	21
8571C000	HEAT EXCHANGER DUAL	21

863521-01	EXTINGUISHER	26
891311-14	OXYGEN BOTTLE	35
892480	PORTABLE FIRE EXTINGUISHER	26
897940-77	CYLINDER O2	35
898052	EXTINGUISHER	26
9000000-10209	TCAS COMPUTER	34
9000000-10309	TCAS COMPUTER	34
9000000-10310	TCAS COMPUTER	34
9032701-08	SEAT	25
9049400-1	IGNITION EXCITER BOX	74
912D0401	MANUAL CONTROLLER	21
93A055-45	MICROPHONE	23
93A055-65	MICROPHONE	23
93A151-50	CVR CONTROL PANEL	23
940-605-31	FUEL FLOW INDICATOR	73
940-605-32	FUEL FLOW INDICATOR	73
940-605-41	FUEL FLOW INDICATOR	73
940-605-42	FUEL FLOW INDICATOR	73
940-638X	FUEL FLOW INDICATOR	73
940-639X	FUEL FLOW INDICATOR	73
945-11	CONTROL UNIT PROTECTION	24
945-12	BUS POWER CONTROL UNIT AC	24
94796-02	SHOCKMOUNT FWD RH	71
94796-03	SHOCKMOUNT AFT RH	71
94796-04	SHOCKMOUNT FWD LH	71
94796-06	TORQUE TUBE	71
94796-07	SHOCKMOUNT AFT LH	71
94796-10	SHOCKMOUNT FWD UPPER	71
9599-607-12326	ANTENNA	34
9599-607-12352	ANTENNA RADIO ALTIMETER	34
9599-607-19993	TRANSCEIVER UNIT - RADIO ALTIMETER	34
9599-607-14528	TRANSCEIVER RADIO ALTIMETER	34

9599-607-14529	TRANSCIEVER RADIO ALTIMETER	34
9599-607-14562	TRANSCIEVER RADIO ALTIMETER	34
9599-607-14572	TRANSCIEVER RADIO ALTIMETER	34
965-1206-011	GPWS	34
9700-A1A-YY0N	CYLINDER AND VALVE ASSEMBLY	35
9700-C1A-YY0N	CYLINDER AND VALVE ASSEMBLY	35
9750W0350-5	EMERGENCY BATTERY	24
9750W0538	MAIN BATTERY	24
979142-6-1	VALVE SHUTOFF TURBOFAN	36
979990-1	VALVE CONTROL TEMPERATURE	21
980-4120-GQUS	DFDR	31
A100400	CONTROLLER DE ICING STANDBY	30
A12SA	MEGAPHONE	25
ACP2531	AUDIO CONTROL PANEL	23
ACP2531AB04	AUDIO CONTROL PANEL	23
ACP2531AC01	AUDIO CONTROL PANEL	23
ACP2531AC02	AUDIO CONTROL PANEL	23
AE1012A00	FAN RECIRCULATION	21
AE1012B00	FAN RECIRCULATION	21
AE1012B01	FAN RECIRCULATION	21
AH2542	CRADDLE	23
AH2542AE01	CRADDLE	23
AH2542AE02	CRADDLE	23
AH2542AL01	CRADDLE	23
AH2542AL02	HANDSET	23
AH2542AN02	ATTENDANT HANSET	23
AH2542BA01	PANEL HANDSET PNC	23
AH2542BA02	PANEL HANDSET PNC	23
AH2542BA03	PANEL HANDSET PNC	23
AH2542CA01	PANEL HANDSET PNC	23
AH2542CA02	PANEL HANDSET PNC	23
AH2542CB01	PANEL HANDSET PNC	23

AHA1653	BRAKE ASSY	32
AHA1653-9	BRAKE ASSY	32
AHA1653-10	BRAKE ASSY	32
AHA1752	WHEEL MLG	32
AHA1890	WHEEL MLG	32
AHA54472	WHEEL NLG	32
AHA54474	WHEEL NLG	32
APE4200	CLOCK	31
APE4210	CLOCK	31
APS30-1	POWER SUPPLY	33
APS32-1	POWER SUPPLY	33
APS40-1	POWER SUPPLY	33
APT-86-1000-01	TRANSMITTER PRESSURE	29
AT0518A01	FAN GROUND COOLING	21
ATD50N	DUCT DISCHARGE	36
AS33-20-01	NET ASSY	25
B03AA1020	VALVE DE ICING DUAL DISTRIBUTOR	30
B03AA1031	VALVE DE ICING DUAL DISTRIBUTOR	30
B03AA1040	VALVE DE ICING DUAL DISTRIBUTOR	30
B03AA1060	VALVE DE ICING DUAL DISTRIBUTOR	30
B07EF2000	DRAIN WATER WING	30
B138S	CONTACTOR	24
B14GF1502	VALVE SHUT OFF	30
B14GF1503	VALVE SHUT OFF	30
B40NA1500	FAN SMOKE DETECTION	26
B47CA1090	VALVE DE ICING SHUTOFF	30
B97N19-201	VALVE FILLING & DRAINING	38
BC2065AE01	SELCAL CODE DE SELECTION	23
BHC1000	VALVE BLOCK SPOILER	27
BHC1000-1	VALVE BLOCK SPOILER	27
BHC1000-2	VALVE BLOCK SPOILER	27

BHC1000-3	VALVE BLOCK SPOILER	27
BHC1020-1	VALVE BLOCK SPOILER	27
BHC1021	VALVE BLOCK SPOILER	27
C11VQ0011	PUMP FUEL ELECTRIC	28
C11VQ0012	PUMP FUEL ELECTRIC	28
C11VQ0013	PUMP FUEL ELECTRIC	28
C11VQ0020	PUMP FUEL ELECTRIC	28
C11VQ0030	PUMP FUEL ELECTRIC	28
C11VQ0030-030	MOTOR ASSY	28
C12424CA	FGCP - FLIGHT GUIDANCE CONTROL PANEL	22
C12424CB	FGCP - FLIGHT GUIDANCE CONTROL PANEL	22
C12424CD	FGCP - FLIGHT GUIDANCE CONTROL PANEL	22
C12428EB	CONTROL PANEL - EFIS RH	31
C12428FA	CONTROL PANEL - EFIS LH	31
C12428FB	CONTROL PANEL - EFIS LH	31
C12428FC	CONTROL PANEL - EFIS LH	31
C12838CC	CONTROL PANEL - INDEX	31
C13158MA01	CPM - CORE PROCESSING MODULE	42
C13159MA	IOM - INPUT OUTPUT MOSULE S	42
C13159MA01	IOM - INPUT OUTPUT MOSULE S	42
C13160MA01	MODULE SWITCH	42
C13202BA	IOM - INPUT OUTPUT MODULE DC	42
C13203AB	CACR - CORE AVIONICS CABINET RACK	42
C13216BA	IOM - INPUT OUTPUT MODULE AP	42
C146440-2	PROPELLER VALVE	61
C16222AA01	TORQUE INDICATOR	73
C16363AA	PROBE CCAS ALPHA	31
C16786VA02	IESI - INTEGRATED ELECTRONIC STANDBY INSTRUMENT	34
C16791AB	MFCP - MULTIFUNCTION CONTROL PANEL	31
C17053MA01	ADC - AIR DATA COMPUTER	34
C17149AA01	RECEIVER GPS	34
C17149JA02	RECEIVER GPS	34

C17LR0020	JET PUMP FEEDER TANK	28
C17MQ0020	JET PUMP ENGINE FEED	28
C18427AA	APSM - AUTO PILOT SERVO MOTOR	22
C18427BA	APSM - AUTO PILOT SERVO MOTOR	22
C18428AA	APC - AUTO PILOT CAPSTAN	22
C19736AA01	IADU - INTEGRATED AVIONIC DISPLAY UNIT	31
C20585710	BRAKE ASSY CARBON	32
C20585711	BRAKE ASSY CARBON	32
C20585712	BRAKE ASSY CARBON	32
C20586100	WHEEL MLG	32
C20586110	WHEEL MLG	32
C20589000	WHEEL NLG	32
C24295350	VALVE SOLENOID NLG WHEEL STEERING	32
C24483010	VALVE SELECTOR SWIVEL	32
C24568000-5	VALVE DIFF CONTROL SELECTOR	32
C24589000-2	BOX UPLOCK	32
C24607000	LEVER ASSY - CONTROL NLG UPLOCK	32
C24644070	VALVE BRAKE	32
C24769000	LEVER ASSY CONTROL MLG UPLOCK LH	32
C24770000	LEVER ASSY CONTROL MLG UPLOCK RH	32
C49AA0211	CANISTER-ELECTRIC PUMP	28
C61LA0010	INDICATOR	28
C90ST0016	MOTOR ASSY	28
C90ST0082	MOTOR ASSY	28
C90ST0103	MOTOR ASSY	28
CAU2533	REMOTE CONTROL AUDIO UNIT	23
CAU2533AA03	REMOTE CONTROL AUDIO UNIT	23
CAU2533AB03	REMOTE CONTROL AUDIO UNIT	23
CAU2533AC01	REMOTE CONTROL AUDIO UNIT	23
CAU2533AC03	REMOTE CONTROL AUDIO UNIT	23
CAU2583	REMOTE CONTROL AUDIO UNIT	23

CAU2583AA03	REMOTE CONTROL AUDIO UNIT	23
CAU2583AB02	REMOTE CONTROL AUDIO UNIT	23
CAU2583AB03	REMOTE CONTROL AUDIO UNIT	23
CAU2583AC01	REMOTE CONTROL AUDIO UNIT	23
CT2542AG01	HANDSET	23
CT2542AG02	HANDSET	23
CT60-2	CHECK VALVE	36
CT60-3	CHECK VALVE	36
CMK80-01	SWITCH PRESSURE LP	35
CRB65	INDICATOR DISCHARGE	35
CGDU2200-00	DETECTOR SMOKE	26
CGDU3000-00	DETECTOR SMOKE	26
D22698500-6	LEG ASSY NLG	32
D22703500-3	BRACE ASSY DRAG NLG	32
D22706000	SPRING LOCKING	32
D22708500	ACTUATORUNLOCKING NLG	32
D22709500	ACTUATOR NLG	32
D22719000	PIN SAFETY LANDING GEAR	32
D22745000	VALVE ANTI-SHIMMY	32
D22847000-1	BOX VALVE	32
D23189000-22	LEG ASSY MLG LH	32
D23189000-23	LEG ASSY MLG LH	32
D23190000-22	LEG ASSY MLG RH	32
D23190000-23	LEG ASSY MLG RH	32
D23209000	SPRING LOCKING	32
D23213000-1	ACTUATOR MLG	32
D23215000-1	ASSISTER FREE FALL MLG	32
D23219000-4	BRACE ASSY MLG LH	32
D23219000-5	BRACE ASSY MLG LH	32
D23220000-4	BRACE ASSY MLG RH	32

D23220000-5	BRACE ASSY MLG RH	32
D23221000	ACTUATOR UNLOCKING MLG LH	32
D23222000	ACTUATOR UNLOCKING MLG RH	32
DVE90-06	VALVE - FEED STOP	35
DVE90-07	VALVE - FEED STOP	35
DR80CS1056	HEADSET	23
DDT1P1291	HAND MIKE	23
DDT1P1377	MICROPHONE	23
DHE1148	SENSOR PROXIMITY	32
DMC60-17-1	ANTENNA VHF	23
DMELT14-1-1	EMERGENCY LOCATOR TRANSMITTER	23
DMH21-1	ANTENNA COUPLER MARKER	34
DMN25-2	ANTENNA GLIDE SLOPE	34
DMN27-2	ANTENNA MARKER	34
DMN4-45-3B	ANTENNA LOOP HALF VOR/LOC	34
E37055	HORN CONTROLLER ANTI ICING	30
E37055M0D1	HORN CONTROLLER ANTI ICING	30
E42084-1	HORN RESISTOR ANTI ICING - ELEVATOR LH	30
E42084-2	HORN RESISTOR ANTI ICING - ELEVATOR RH	30
E42085	HORN RESISTOR ANTI-ICING - RUDDER	30
E42086-1	HORN RESISTOR ANTI ICING - AILERON LH	30
E42086-2	HORN RESISTOR ANTI ICING - AILERON RH	30
E42087-1	HORN RESISTOR ANTI ICING - AILERON LH	30
E42087-2	HORN RESISTOR ANTI ICING - AILERON RH	30
EAG200B	PTB - POWER TRIM BOX	22
ED34A350	FDAU	31
ED35E109-01-04	AUXILIARY FDAU	34
EL132-01	OVERHEAT DETECTION UNIT	30
ELT90A256001300	MOUNT ELT	25
ELT96A256000000	TRANSMITTER EMERGENCY LOCATOR	25
EV5247-2-00	ELECTROVALVE	61



EVAC2423DC	GROUND COOLING FAN	21
EVAC2423EC	GROUND COOLING FAN	21
EVAC2423FC	GROUND COOLING FAN	21
EVAC2423FD	GROUND COOLING FAN	21
EVAC2423H	GROUND COOLING FAN	21
EVAC523EXA	FAN RECIRCULATION	21
EVAC523G2	FAN RECIRCULATION	21
EVCTA325A	FAN RECIRCULATION	21
EVCTA325AAMD TB	FAN RECIRCULATION	21
EVTA1925B	EXHAUST FAN AIR	21
EVTA1926BA	EXHAUST FAN AIR	21
EVTA1926CA	EXHAUST FAN AIR	21
EVTA1926DA	EXHAUST FAN AIR	21
EVTA1926DC	EXHAUST FAN AIR	21
F11NA3121	TRANSFORMER RECTIFIER UNIT	24
F32HB0361	MOTOR ASSY	28
F32HB0361EF1	MOTOR ASSY	28
F46BC0101	SMOKE DETECTOR CONTROL BOX	26
F46BD0101	SMOKE DETECTOR CONTROL BOX	26
F96GA0101-070	SIGNAL LIGHT	32
F96GA0102	LEVER CONTROL LDG	32
FE159-5-002	HYDRO MECHANICAL BRAKE ASSEMBLY	61
FE159-5-005	HYDRO MECHANICAL BRAKE ASSEMBLY	61
FE159-5-006	HYDRO MECHANICAL BRAKE ASSEMBLY	61
FE159-5-007	HYDRO MECHANICAL BRAKE ASSEMBLY	61
FE159-5-007A	HYDRO MECHANICAL BRAKE ASSEMBLY	61
FE159-5-007B	HYDRO MECHANICAL BRAKE ASSEMBLY	61
FE179-002	FLAP CONTROL ACTUATOR	27
FE179-003	FLAP CONTROL ACTUATOR	27
FE179-004	FLAP CONTROL ACTUATOR	27
FE188-003	RUDDER DAMPER ASSEMBLY	27
FE188-004	RUDDER DAMPER ASSEMBLY	27

FE188-005	RUDDER DAMPER ASSEMBLY	27
FE192-000	RESTRICTOR FLAP VALVE BLOCK	27
FE193-001	FLAP CONTROL ACTUATOR	27
FE193-002	FLAP CONTROL ACTUATOR	27
FE193-003	FLAP CONTROL ACTUATOR	27
FE193-004	FLAP CONTROL ACTUATOR	27
FE193-005	FLAP CONTROL ACTUATOR	27
FE201-6-001	BRAKE PROPELLER	61
FE201-6-002	BRAKE PROPELLER	61
FE201-6-002A	BRAKE PROPELLER	61
FE201-6-002B	BRAKE PROPELLER	61
FE201-6-003	BRAKE PROPELLER	61
FE202-001	BRAKE PROPELLER	61
FE204-000	RESTRICTOR FLAP VALVE BLOCK	27
FE205-000	DAMPER RUDDER	27
FE231-000	FLAP CONTROL ACTUATOR	27
FE231-001	FLAP CONTROL ACTUATOR	27
FE231-002	FLAP CONTROL ACTUATOR	27
FE231-003	FLAP CONTROL ACTUATOR	27
FE237-000	FLAP CONTROL ACTUATOR	27
FE237-001	FLAP CONTROL ACTUATOR	27
FE237-002	FLAP CONTROL ACTUATOR	27
FR3123	SMOKE DETECTOR	26
FR3212	SMOKE DETECTOR	26
FR3222	SMOKE DETECTOR	26
FPTN404848R0001	TARGET	52
FTA716	SMOKE DETECTOR	26
G7622-001	CONTROL UNIT COMM CTL-22	23
G7622-101	CONTROL UNIT COMM CTL-22	23
G7622-102	CONTROL UNIT COMM CTL-22	23
G7622-103	CONTROL UNIT COMM CTL-22	23
G7622-104	CONTROL UNIT COMM CTL-22	23

G7622-105	CONTROL UNIT COMM CTL-22	23
G7622-112	CONTROL UNIT COMM CTL-22	23
G7622-113	CONTROL UNIT COMM CTL-22	23
G7622-114	CONTROL UNIT COMM CTL-22	23
G7622-115	CONTROL UNIT COMM CTL-22	23
GMT4150	CLOCK	31
GMT4150-1	CLOCK	31
H321BDM1	INDICATOR STBY HORIZON	31
HA2542AR04	HANDSET	23
HA2542AR05	HANDSET	23
JP2551	JACK PANEL BOOMSET AND HEADSET	23
JP2551B	JACK PANEL BOOMSET AND HEADSET	23
JP2579	JACK PANEL HAND MICROPHONE	23
K9321050A030	MCDU - MULTIFUNCTION CONTROL & DISPLAY UNIT	34
K9321050A031	MCDU - MULTIFUNCTION CONTROL & DISPLAY UNIT	34
KCA0105W	STANDBY COMPAS	34
L93C31-651	VALVE REFUEL - DEFUEL	28
L93D31-651	VALVE REFUEL - DEFUEL	28
LA4E20606HM0100	MULTIFONCTION COMPUTER	31
LA4E20608HM0100	MULTIFONCTION COMPUTER	31
M10DE0103	EXHAUST CONE	78
M10DE0104	EXHAUST CONE	78
M10DE0104R	EXHAUST CONE	78
M83P1801A	MIKE	23
MC10-04-105	CREW OXYGEN MASK REGULATOR	35
MC10-04-107	CREW OXYGEN MASK REGULATOR	35
MC10-04-109	CREW OXYGEN MASK REGULATOR	35
MC10-04-110	CREW OXYGEN MASK REGULATOR	35
MI585350-5	WEATHER RADAR TRANSCEIVER	34
MI585353	ANTENNA PEDESTAL	34
MS741-000	INDICATOR LIGHT ICING	30
MXP142	FLIGHT CREW MASK STOWAGE	35

MXP601	STOWAGE BOX OXYGEN MASK	35
NP158801-3	WINDSHIELD MAIN LH 1	56
NP158801-4	WINDSHIELD MAIN RH 1	56
NP158862-3	WINDOW LH SIDE 2	56
NP158862-4	WINDOW RH SIDE 2	56
NP158803-1	WINDOW LH SIDE 3	56
NP158803-2	WINDOW RH SIDE 3	56
NP158824	STANDARD CABIN WINDOW ASSEMBLY	56
NP158824-101	STANDARD CABIN WINDOW PANE	56
NP158824-102	INNER PANEL CABIN WINDOW	56
NP158824-103	STANDARD GASKET	56
NP158814	FORWARD ICE IMPACT ASSEMBLY	56
NP158814-101	FORWARD ICE IMPACT OUTER PANE	56
NP158814-103	FORWARD ICE IMPACT GASKET	56
NP158815	AFT ICE IMPACT ASSEMBLY	56
NP158815-101	AFT ICE IMPACT OUTER PANE	56
NP158815-103	AFT ICE IMPACT GASKET	56
P84-344-200	VALVE PRESSURE RELIEF	32
PA2532	PUBLIC ADDRESS AMPLIFIER	23
PA2532AB01	PUBLIC ADDRESS AMPLIFIER	23
PR4237-1	SHAKER STICK	27
PRE1010	AMBIANT PRESSURE UNIT	21
Q17-94122051A	CLOCK	31
Q17-94122051AA	CLOCK	31
Q17-94122051AB	CLOCK	31
Q17-94122051FA	CLOCK	31
Q17-94122051FGE	CLOCK	31
R22022	STRUT	52
R25-1-1	POWER SUPPLY	33
R25-1-1A	POWER SUPPLY	33
R25-1M2BR	ANTI-COLLISION LIGHT	33
R25-1M2BW	ANTI-COLLISION LIGHT	33

R25-1M2CW	ANTI-COLLISION LIGHT	33
R810510-1	ACTUATOR	61
R810510-2	ACTUATOR	61
R810510-3	ACTUATOR	61
R815475-4	DEICER BLADE	61
R817370-1	BLADE PROPELLER	61
R817370R1	BLADE PROPELLER	61
R815505-2	BLADE PROPELLER	61
R815505-3	BLADE PROPELLER	61
R815505R2	BLADE PROPELLER	61
R815505R3	BLADE PROPELLER	61
R815505S3	BLADE PROPELLER	61
R815505-6	BLADE PROPELLER	61
RC106-00	ELECTRICAL HEATING BOX	30
RCF6709	TRANSMITTER OXYGEN PRESSURE	35
RG380E44	MAIN BATTERY	24
RG42	EMERGENCY BATTERY	24
RP171-00	SENSOR	26
S0003004100000	PIPE ASSY ANTI ICE	30
S0041012200000	LEADING EDGE	57
S0041012200100	LEADING EDGE	57
S0041012300000	LEADING EDGE	57
S0041012300100	LEADING EDGE	57
S0041040000000	LEADIND EDGE	57
S0041040100000	LEADING EDGE	57
S0041040200000	LEADING EDGE	57
S0041040200100	LEADING EDGE	57
S0041045000100	LEADING EDGE	57
S161-0090-02	CVR CONTROL PANEL	34
S2128006000100	DUCT ASSY	51
S2158146301500	DUCT ASSY	51
S2158146700400	DUCT	51

S2158146700500	DUCT	51
S21850-6300	LIFE JACKET	25
S21850-7400	LIFE JACKET	25
S2421002600000	HOUSING	24
S2421401000200	HOUSING	24
S2431004100200	INLET	51
S2431004100400	INLET	51
S2511056400000	DOOR	51
S2511056400540	DOOR	51
S2521717100000	FAIRING	51
S2521790800200	PANEL ASSY	25
S2521794800000	LINING ASSY	25
S2521804600200	LINING ASSY	25
S2551042100000	PANEL	25
S2551042101000	PANEL	25
S2718141600200	LEVER ASSY	27
S2728118500402	COVER	51
S2728176000000	LEVER ASSY	27
S2728192900200	ROD	27
S3611004401600	DUCT ASSY	51
S5217600100800	DOOR PAX	52
S5217600101200	PAX DOOR	52
S5217600106200	DOOR	52
S5217600106600	DOOR	52
S5217600107200	DOOR	52
S5217600107400	DOOR PAX	52
S5227600102000	DOOR	52
S5227700100000	DOOR EMERGENCY EXIT	52
S5227700100400	DOOR EMERGENCY EXIT	52
S5237600103000	DOOR ASSY CARGO	52
S5237600104200	DOOR	52
S5237600104295	CARGO DOOR	52

S5237600105600	CARGO DOOR	52
S5237600113200	CARGO DOOR	52
S5237600113400	DOOR ASSY	52
S5237600114400	DOOR CARGO	52
S5237600114600	CARGO DOOR	52
S523763008	DOOR CARGO	52
S5237900101600	DOOR ASSY LH	52
S5241055200200	PANEL	52
S5241055200400	PANEL	52
S5241055700400	PANEL	52
S5247121200900	DOOR	52
S5247700100600	DOOR ASSY	52
S5247700100800	DOOR ASSY	52
S5247700101200	DOOR SERVICE	52
S524R0014-016	PANEL	52
S524R0014-024	PANEL	52
S5267110001000	AIRSTAIR ASSY	52
S5267111501200	HAND RAIL	52
S5287130402950	DOOR ASSY MLG RH	52
S5287130600902	GEAR DOOR	52
S5287431200400	DOOR ASSY	52
S5287660100400	DOOR ASSEMBLY	52
S5287660101400	DOOR ASSEMBLY	52
S5287660101500	DOOR ASSEMBLY	52
S5287660200200	DOOR ASSEMBLY	52
S5287660200600	ASSEMBLY	52
S5287660200700	DOOR	52
S5287660201400	DOOR NLG L/H	52
S5287660201500	NLG FWD DOOR RH	52
S5287660201600	DOOR	52
S5287660201700	NLG AFT DOOR	52
S5287920200200	DOOR	52

S5287930100450	MLG DOOR ASSY LH	52
S5287930100550	MLG DOOR ASSY LH	52
S5287930101050	MLG DOOR ASSY LH	52
S5287930101150	MLG DOOR ASSY	52
S5287930101851	MLG DOOR ASSY LH	52
S5307030301000	FLOOR PANEL	51
S5307150201200	PANEL ASSY	53
S5307150301200	PANEL ASSY	53
S5307150500800	PANEL ASSY	53
S5307150501200	PANEL ASSY	25
S5307150502400	PANEL ASSY	53
S5307150504200	FLOOR ASSY	53
S5307300005600	CONE ASSY	53
S5307300007200	CONE ASSY	53
S5357170002600	SHIELD	53
S5357840000251	FITTING	53
S5367129100800	FILLER ASSY	53
S5387500001200	DOOR ASSY	52
S5391007001200	PANEL ASSY	53
S5391007602700	PANEL ASSY	53
S5391203001200	PANEL ASSY	53
S5391206000800	PANEL ASSY	53
S5391207000800	PANEL ASSY	53
S5397121100500	PANEL ASSY	53
S5397121102000	PANEL ASSY LH	53
S5397121500200	PANEL MLG FAIRING LH	53
S5397121500300	PANEL MLG FAIRING RH	53
S5397130201400	PANEL	53
S5397130300701	PANEL ASSY RH	53
S5397410200800	PANEL	53
S5397410301200	PANEL	53
S5397420200400	FAIRING	53



S5397430100800	PANEL	53
S5397471100402	AIR INTAKE	53
S5397471100502	AIR INTAKE	53
S5397480100201	PANEL	53
S53975000002A4	DOME RADAR	53
S5397500001400	DOME RADAR	53
S5397500001600	DOME RADAR	53
S5397500001800	DOME RADAR	53
S5397500003200	DOME RADAR	53
S5397900300802	LEADING EDGE	53
S5411040200600	COWL	54
S5411040300001	COWL	54
S5411040300600	COWL	54
S5411040400851	BEAM ASSY	54
S5411040401251	BEAM ASSY	54
S5411052500000	AIR INTAKE	71
S5411052500002	AIR INTAKE	71
S5411060001860	FAIRING COOLER	54
S5411060301551	FAIRING LOWER	54
S5411060900000	GASPATH ASSY	71
S5411200100000	COWL ASSY	54
S5411240200400	COWL ASSY	54
S5411249500000	OUTLET	71
S5411249600000	INLET ASSY AIR	54
S5411260000051	FAIRING ASSY ENGINE	54
S5411260000052	FAIRING ASSY ENGINE	54
S5411260000053	FAIRING ASSY ENGINE	54
S5411265600000	GASPATH ASSY	71
S5411265600200	GASPATH ASSY	71
S5411265600400	DUCT ASSY	71
S5411265600600	ASSEMBLY	71
S5411265600700	DUCT ASSY	71

S5411265600800	DUCT ASSY	71
S5411267000000	DUCT ASSY	54
S5411267000095	DUCT ASSY	54
S5411267000200	DUCT ASSY	54
S5411267000600	OIL COOLER DUCT ASSY	30
S5411267001000	OIL COOLER DUCT ASSY	54
S5411267001200	OIL COOLER DUCT ASSY	54
S5411267001300	OIL COOLER DUCT ASSY	30
S5411272300301	DUCT ASSY EXHAUST	31
S5411275900001	AIR INTAKE	30
S5411275900200	AIR INTAKE	54
S5411275900201	AIR INTAKE	71
S5411275900300	AIR INTAKE	71
S5411275900401	AIR INTAKE	71
S5411275900601	AIR INTAKE	71
S5411275900801	AIR INTAKE	71
S5411278000000	OUTLET VANE	57
S5411278000200	DUCT ASSY	57
S5411278000201	DUCT ASSY	57
S5411561900000	AIR INTAKE DUCT ASSY	71
S5421010300000	DOOR	57
S5421010300100	CAPOT LATERAL	54
S5421014000300	COWL ASSY	52
S5421014000700	COWL ASSY	54
S5421210300000	COWL ASSY	54
S5421210300400	COWL ASSY	54
S5421210300500	COWL ASSY	54
S5421210600000	COWL ASSY	54
S5421210600100	COWL ASSY	54
S5421210700000	COWL ASSY	54
S5421210700300	COWL LOWER ASSY	54
S5421222600100	COWL ASSY	54

S5421222700100	COWL ASSY	54
S5421222800000	COWL ASSY	54
S5421222800100	COWL ASSY	54
S5421260000100	FAIRING	54
S5421502000200	FIREWALL ASSY	54
S5421502000300	FIREWALL ASSY	54
S5431011000100	COWL ASSY	54
S5431011000200	COWL ASSY	54
S5431011000201	COWL ASSY	54
S5431011000300	COWL ASSY	54
S5431212000000	COWL ASSY	54
S5431220001000	FAIRING ASSY	54
S5431220001100	FAIRING ASSY	54
S5431301100000	COWL LOWER ASSY	54
S5507000220002	FAIRING	55
S5517000000251	HORIZONTAL STAB	55
S5517200000400	LEADING EDGE	55
S5517200000500	LEADING EDGE	55
S5517200000600	LEADING	55
S5517200000651	LEADING	55
S5517200000700	LEADING EDGE	55
S5517200000751	LEADING EDGE	55
S5517200000851	LEADING EDGE LH	55
S5517200000900	LEADING EDGE	55
S5517200000951	LEADING EDGE RH	55
S5517310600000	LUG ASSY	55
S5517310800000	LUG ASSY	55
S5517320000901	COVER ASSY HINGE	55
S5527000000600	ELEVATOR ASSY	55
S5527000000700	ELEVATOR ASSY	55
S5527000002600	ELEVATOR ASSY	55
S5527000002700	ELEVATOR ASSY	55

S5527000003000	ELEVATOR ASSY	55
S5527000003100	ELEVATOR ASSY	55
S5527000003400	ELEVATOR ASSY	55
S5527000003500	ELEVATOR ASSY	55
S5527000004200	ELEVATOR ASSY	55
S5527000004300	ELEVATOR ASSY RH	55
S5527400000600	TRIM ELEVATOR	55
S5527400001100	TRIM ELEVATOR	55
S5527600001406	TRAILING EDGE	55
S5527600001506	TRAILING EDGE	57
S55371000-006	VERTICAL STABILIZER	57
S5537220001000	LEADING EDGE	55
S55374000-000	VERTICAL TAIL TOP ASSY	57
S5547000000400	RUDDER ASSY	55
S5547000001600	RUDDER ASSY	55
S5547000001800	RUDDER	55
S5547000002600	RUDDER ASSY	55
S5547000003800	RUDDER ASSY	55
S5547900001200	TRIM TAB ASSY	55
S5547900090000	TRIM TAB ASSY	55
S5561210400000	FAIRING	57
S5701006320001	ASSEMBLY	57
S5701006420001	SPACER	57
S5701006720001	SPACER	57
S5701055901000	BEAM	57
S5701056001060	BEAM	57
S5701056901000	BEAM	57
S5701056901100	BEAM	57
S5701206600140	BEAM	57
S5701506500000	BRACKET ASSY	57
S5731200200800	TIP LIGHT COVER	57
S5741002800700	LEADING EDGE	57

S5741003101200	LEADING EDGE	57
S5741003400200	LEADING EDGE	57
S5741003800000	LEADING EDGE	57
S5741003800095	LEADING EDGE	57
S5741003800100	LEADING EDGE	57
S5741003800195	LEADING EDGE	57
S5741003800400	LEADING EDGE	57
S5741003800495	LEADING EDGE	57
S5741003800500	LEADING EDGE	57
S5741003800595	LEADING EDGE	57
S5741003800600	LEADING EDGE	57
S5741003800695	LEADING EDGE	57
S5741003800700	LEADING EDGE	57
S5741003800795	LEADING EDGE	57
S5741003800800	LEADING EDGE	57
S5741003800895	LEADING EDGE	57
S5741003800900	LEADING EDGE	57
S5741003800995	LEADING EDGE	57
S5741003801000	LEADING EDGE	57
S5741003801100	LEADING EDGE	57
S5741004200000	LEADING EDGE	57
S5741004200095	LEADING EDGE	57
S5741004200100	LEADING EDGE	57
S5741004200195	LEADING EDGE	57
S5741004200200	LEADING EDGE	57
S5741004200295	LEADING EDGE	57
S5741004200300	LEADING EDGE	57
S5741004200395	LEADING EDGE	57
S5741004200600	LEADING EDGE	57
S5741004200700	LEADING EDGE	57
S5741004200800	LEADING EDGE	57
S5741004200900	LEADING EDGE	57

S5741004201000	LEADING EDGE	57
S5741004201100	LEADING EDGE	57
S5741004201200	LEADING EDGE	57
S5741004201300	LEADING EDGE	57
S5741004201400	LEADING EDGE	57
S5741004201500	LEADING EDGE	57
S5741004600095	LEADING EDGE	57
S5741004600195	LEADING EDGE	57
S5741004600200	LEADING EDGE	57
S5741004600295	LEADING EDGE	57
S5741004600395	LEADING EDGE	57
S5741004600495	LEADING EDGE	57
S5741004600595	LEADING EDGE	57
S5741004600695	LEADING EDGE	57
S5741004600700	LEADING EDGE	57
S5741004600795	LEADING EDGE	57
S5741004601200	LEADING EDGE	57
S5741004601295	LEADING EDGE	57
S5741004601395	LEADING EDGE	57
S5741004601400	LEADING EDGE	57
S5741004601495	LEADING EDGE	57
S5741004601500	LEADING EDGE	57
S5741004601595	LEADING EDGE	57
S5741004601800	LEADING EDGE	57
S5741004601895	LEADING EDGE	57
S5741004601900	LEADING EDGE	57
S5741004601995	LEADING EDGE	57
S5741005000095	LEADING EDGE	57
S57310051001200	LIGHT COVER LH	33
S57310051001300	LIGHT COVER RH	33
S5741005600095	LEADING EDGE	57
S5741005600195	LEADING EDGE	57

S5741009300095	LEADING EDGE	57
S5741009300295	LEADING EDGE	57
S5741200200100	LEADING EDGE	57
S5741200200300	LEADING EDGE	57
S5731200200800	LIGHT COVER LH	33
S5731200200900	LIGHT COVER RH	33
S5741200600000	LEADING EDGE	57
S5741200600095	LEADING EDGE	57
S5741200600100	LEADING EDGE	57
S5741200600195	LEADING EDGE	57
S5741200600200	LEADING EDGE	57
S5741200600295	LEADING EDGE	57
S5741200600300	LEADING EDGE	57
S5741200600395	LEADING EDGE	57
S5741200600400	LEADING EDGE	57
S5741200600495	LEADING EDGE	57
S5741200600500	LEADING EDGE	57
S5741200600595	LEADING EDGE	57
S5741200600600	LEADING EDGE	57
S5741201600010	LEADING EDGE	57
S5741201600095	LEADING EDGE	57
S5741201600100	LEADING EDGE	57
S5741201600110	LEADING EDGE	57
S5741201600195	LEADING EDGE	57
S5741201600210	LEADING EDGE	57
S5741201600310	LEADING EDGE	57
S5741202200000	LEADING EDGE	57
S5741208000001	LEADING EDGE	57
S5741208000200	LEADING EDGE	57
S5741208000400	LEADING EDGE	57
S5741209000101	LEADING EDGE	57
S5741209000300	LEADING EDGE	57

S5741209000500	LEADING EDGE	57
S5741211400000	LEADING EDGE	57
S5741211400095	LEADING EDGE	57
S5741211400100	LEADING EDGE	57
S5741211400195	LEADING EDGE	57
S5741211400200	LEADING EDGE	57
S5741211400210	LEADING EDGE	57
S5741211400300	LEADING EDGE	57
S5741211400310	LEADING EDGE	57
S5741211700010	LEADING EDGE	57
S5741211700110	LEADING EDGE	57
S5741211700210	LEADING EDGE	57
S5741211700310	LEADING EDGE	57
S5741212100000	LEADING EDGE	57
S5741212100095	LEADING EDGE	57
S5741212100096	LEADING EDGE	57
S5741212100100	LEADING EDGE	57
S5741212100195	LEADING EDGE	57
S5741212100300	LEADING EDGE	57
S5741212100400	LEADING EDGE	57
S5741212100496	LEADING EDGE	57
S5741212100500	LEADING EDGE	57
S5741212100596	LEADING EDGE	57
S5741212100600	LEADING EDGE	57
S5741212100610	LEADING EDGE	57
S5741212100700	LEADING EDGE	57
S5741212100710	LEADING EDGE	57
S5741212100800	LEADING EDGE	57
S5741212100810	LEADING EDGE	57
S5741212100910	LEADING EDGE	57
S5741212500295	LEADING EDGE	57
S5741212500296	LEADING EDGE	57



S5741212500300	LEADING EDGE	57
S5741212500395	LEADING EDGE	57
S5741212500396	LEADING EDGE	57
S5741212500500	LEADING EDGE	57
S5741212500600	LEADING EDGE	57
S5741212500696	LEADING EDGE	57
S5741212500700	LEADING EDGE	57
S5741212500796	LEADING EDGE	57
S5741212500800	LEADING EDGE	57
S5741212500900	LEADING EDGE	57
S5741212501000	LEADING EDGE	57
S5741212501010	LEADING EDGE	57
S5741212501100	LEADING EDGE	57
S5741212501110	LEADING EDGE	57
S5741212700700	LEADING EDGE	57
S5741217000095	LEADING EDGE	57
S5741504600000	LEADING EDGE	57
S5741504600100	LEADING EDGE	57
S5741504600195	LEADING EDGE	57
S5741504600200	LEADING EDGE	57
S5741504800000	LEADING EDGE	57
S5741504800100	LEADING EDGE	57
S5741504800200	LEADING EDGE	57
S5741504800300	LEADING EDGE	57
S5741505600100	LEADING EDGE	57
S5741505600300	LEADING EDGE	57
S5741505600500	LEADING EDGE	57
S5741509300200	LEADING EDGE	57
S5741509300400	LEADING EDGE	57
S5751000500000	FLAP INBOARD	57
S5751000500200	FLAP INBOARD	57
S5751000500295	FLAP INBOARD	57

S5751000500495	FLAP INBOARD	57
S5751000501300	FLAP INBOARD	57
S5751000502095	FLAP INBOARD LH	57
S5751000502100	FLAP INBOARD RH	57
S5751000502195	FLAP INBOARD	57
S5751000502400	FLAP INBOARD LH	57
S5751000502495	FLAP INBOARD	57
S5751000502500	FLAP INBOARD RH	57
S5751000502595	FLAP INBOARD RH	57
S5751000502895	FLAP INBOARD	57
S5751000503100	FLAP INBOARD RH	57
S5751000503500	FLAP INBOARD	57
S5751000504300	FLAP INBOARD	57
S5751004000501	DEFLECTEUR ASSY	57
S5751005000200	DEFLECTEUR ASSY	57
S57510080002	FLAP OUTBOARD	57
S5751008001095	FLAP OUTBOARD RH	57
S5751008001200	FLAP OUTBOARD	57
S5751008001695	FLAP OUTBOARD LH	57
S5751008002000	FLAP OUTBOARD	57
S5751008002095	FLAP OUTBOARD	57
S5751008002100	FLAP OUTBOARD RH	57
S5751008002195	FLAP OUTBOARD	57
S5751008002600	FLAP OUTBOARD	57
S5751008002851	FLAP OUTBOARD LH	57
S5751008003700	FLAP OUTBOARD RH	57
S5751021201060	FLAP OUTBOARD	57
S5751051100900	PANEL ASSY	57
S5751051101200	PANEL ASSY	57
S5751051101900	PANEL ASSY	57
S5751051201800	PANEL ASSY	57
S5751051301900	PANEL ASSY	57

S5751065000400	FITTING ASSY	57
S5751066000500	FITTING ASSY	57
S5751067000400	FITTING ASSY	57
S5751070900200	PANEL ASSY LH	57
S5751070900300	PANEL ASSY RH	57
S5751071000200	PANEL ASSY LH	57
S5751071000300	PANEL ASSY RH	57
S5751200500000	FLAP INBOARD LH	57
S5751200500595	FLAP INBOARD RH	57
S5751200500650	FLAP INBOARD	57
S5751200500695	FLAP INBOARD LH	57
S5751200500750	FLAP INBOARD	57
S5751200500795	FLAP INBOARD	57
S5751200500895	FLAP INBOARD	57
S5751200501095	FLAP INBOARD LH	57
S5751200501151	FLAP INBOARD RH	57
S5751200501195	FLAP INBOARD RH	57
S5751200501895	FLAP INBOARD	57
S5751200501951	FLAP INBOARD	57
S5751200501995	FLAP INBOARD	57
S5751200502000	FLAP INBOARD LH	57
S5751200502051	FLAP INBOARD	57
S5751200502151	FLAP INBOARD RH	57
S5751200502195	FLAP INBOARD RH	57
S5751200502600	FLAP ASSY INBOARD	57
S5751200502651	FLAP INBOARD LH	57
S57512006000H00	FLAP INBOARD LH	57
S57512006001H00	FLAP INBOARD RH	57
S57512006005000	FLAP	57
S5751208000495	FLAP OUTBOARD LH	57
S5751208000895	FLAP EXTERNAL LH	57
S5751208000995	FLAP OUTBOARD RH	57

S5751208001095	FLAP OUTBOARD LH	57
S5751208001150	FLAP OUTBOARD RH	57
S5751208001195	FLAP OUTBOARD	57
S5751208001251	FLAP OUTBOARD	57
S5751208001295	FLAP OUTBOARD	57
S5751208001595	FLAP OUTBOARD	57
S5751208002000	FLAP OUTBOARD LH	57
S5751208002051	FLAP OUTBOARD	57
S5751208002100	FLAP OUTBOARD	57
S5751208002151	OUTBOARD FLAP RH	57
S5751208002195	OUTBOARD FLAP RH	57
S5751208002251	FLAP OUTBOARD	57
S5751208002351	FLAP OUTBOARD	57
S5751208002451	FLAP OUTBOARD	57
S5751208002551	FLAP OUTBOARD LH	57
S5751208002651	FLAP OUTBOARD LH	57
S5751208002751	FLAP OUTBOARD RH	57
S5751208400400	FLAP OUTBOARD LH	57
S57512084005000	FLAP EXTERNAL RH	57
S5751208400700	BOX ASSY FLAP RH	57
S5751208500900	FLAP	57
S5751221102260	FLAP INBOARD LH	57
S5751222100400	FITTING ASSY	57
S5751233100000	FLAP INBOARD	57
S5751233200000	FLAP OUTBOARD	57
S5751233200100	FLAP OUTBOARD	57
S5751235300100	PANEL ASSY	57
S5751238600900	PANEL ASSY	57
S5751521400200	RIB	57
S5751522100100	FLAP INBOARD LH	57
S5751566500000	FITTING ASSY	57
S5761015600395	AILERON ASSY	57

S5761015601401	AILERON LH	57
S5761015601495	AILERON	57
S5761015601501	AILERON ASSY	57
S5761015601595	AILERON	57
S5761015601601	AILERON ASSY LH	57
S5761015601695	AILERON ASSY	57
S5761015601700	AILERON, FIN	57
S5761015601701	AILERON ASSY RH	57
S5761015601795	AILERON ASSY RH	57
S5761025000095	AILERON ASSY LH	57
S5761025000100	AILERON ASSY	57
S5761025000195	AILERON ASSY RH	57
S5761025000201	AILERON ASSY	57
S5761025000251	AILERON ASSY	57
S5761025000301	AILERON ASSY	57
S5761027000101	TAB	57
S5761201200000	AILERON ASSY	57
S5761204700001	CRANK ASSY	57
S5761215601295	AILERON ASSY LH	57
S5761215601895	AILERON ASSY	57
S5761215601901	AILERON ASSY RH	57
S5761215601995	AILERON ASSY RH	57
S5761215602001	AILERON ASSY	57
S5761215602095	AILERON ASSY RH	57
S5761215602101	AILERON ASSY RH	57
S5761215602301	AILERON ASSY	57
S5761218000500	TAB	57
S5761218000700	TAB	57
S5761218000900	TAB	57
S5761315601097	AILERON ASSY	57
S5761315601099	AILERON ASSY	57
S5761315601195	AILERON ASSY	57

S5761315601199	AILERON ASSY	57
S5761315601200	AILERON ASSY LH	57
S5761315601296	AILERON ASSY	57
S5761315601797	AILERON ASSY	57
S5761315602000	AILERON ASSY	57
S5761315602095	AILERON ASSY LH	57
S5761315602096	AILERON ASSY LH	57
S5761315602100	AILERON ASSY	57
S5761315602195	AILERON TAB	57
S5761516400852	HORN ASSY	57
S5761525000700	AILERON ASSY	57
S5761530000396	AILERON ASSY	57
S5761530000800	AILERON ASSY	57
S5761530000900	AILERON ASSY	57
S5771000000600	SPOILER ASSY LH	57
S5771000002001	SPOILER ASSY LH	57
S5771000002101	SPOILER ASSY LH	57
S5771200000400	SPOILER ASSY	57
S5791000100200	FAIRING ASSY	57
S5791201100601	FAIRING ASSY	57
S5791202100600	FAIRING ASSY	57
S5791207100900	FAIRING FLAP RH	57
S67-1575-145	ANTENNA GPS	34
S7811000000000	PIPE	78
S7811200000000	PIPE	78
S7811200000200	PIPE	78
S7811210400200	PIPE	78
SC2253A	DECODER - SELCAL	23
SFA13M1P0A	BLADE PROPELLER	61
SFA13M1R0A	BLADE PROPELLER	61
SFA13N1P0A	BLADE PROPELLER	61
SFA13N1R0A	BLADE PROPELLER	61

SFA13U1P0A	BLADE PROPELLER	61
SFA13U1R0A	BLADE PROPELLER	61
SFA13S1P0A	BLADE PROPELLER	61
SFA13S1R0A	BLADE PROPELLER	61
SM150D10	RELAY	24
SM400D38	RELAY	24
SM400D39	CONTACTOR	24
SM400D40	CONTACTOR	24
SM400D41	CONTACTOR	24
SPSATR42-1-2-2	WINDSHIELD FRONT RH	56
SPSATR42-2-2-2	WINDSHIELD FRONT LH	56
SPSATR42-3-2-2	WINDSHIELD FORWARD SIDE RH	56
SPSATR42-4-2-2	WINDSHIELD FORWARD SIDE LH	56
SPSATR42-5-1-0	WINDSHIELD REAR SIDE RH	56
SPSATR42-6-1-0	WINDSHIELD REAR SIDE LH	56
SPSATR42-7-2-0	WINDOW CABIN	56
SPSATR42-7-2-0-1	WINDOW CABIN	56
SPSATR42-7-2-0-2	WINDOW CABIN	56
SPSATR42-7-2-0-3	WINDOW CABIN	56
SPSATR42-8-1-0	WINDOW CABIN REAR ICE	56
SPSATR42-8-1-0-1	WINDOW CABIN REAR ICE	56
SPSATR42-8-1-0-2	WINDOW CABIN REAR ICE	56
SPSATR42-8-1-0-3	WINDOW CABIN REAR ICE	56
SPSATR42-9-1-0	WINDOW CABIN FORWARD ICE	56
SPSATR42-9-1-0-1	WINDOW CABIN FORWARD ICE	56
SPSATR42-9-1-0-2	WINDOW CABIN FORWARD ICE	56
SPSATR42-9-1-0-3	WINDOW CABIN FORWARD ICE	56
SW40002JP04S	FITTING SWIVEL	32
TM512-202	TRANSMITTER FUEL FLOW	73
TM512-204	TRANSMITTER FUEL FLOW	73
TNAS1024-118	TRANSMITTER FUEL FLOW	28
V2T125	VALVE UNDERFLOOR	21

V2T125-1	VALVE UNDERFLOOR	21
V2T125-2	VALVE UNDERFLOOR	21
VL005030B	ACTUATOR	27
VL32C11	CARGO DOOR ACTUATOR	52
VN1001-1	ACTUATOR SPOILER	27
VST170-1	VALVE OVERBOARD VENTILATION	21